CM1041T_XSA-03310C_EN.fm Page 1 Wednesday, July 9, 2008 11:37 AM

OWNER'S MANUAL

CM-1041T

COMMERCIAL MICROWAVE OVEN

1100 watts

Quick Look-up Guide....2
Oven & Display....2
Control Panel....3
Using this Instruction Booklet....3
Safety Precautiones....4
Installing Your Microwave Oven....5
What to Do if You are in Doubt or Have a Problem....5
Setting Cooking Times & Power Levels....6
Using the Defrost button....7
Using the Start(+30s) button....7
Using the Stop/Cancel() Button....7
Memory Programming....8
Using the Check button....9
Resetting the Memory Program Cycle Counter....10
Setting the Sound....10
Using the Double Quantity button....10
Cookware Guide....11
Cooking Guide....12
Cleaning Your Microwave Oven....14
Storing and Repairing Your Microwave Oven....14
Technical Specifications....15
Warranty....15
Terms and Conditions....15
Note....17

Bonn

COMMERCIAL MICROWAVE OVEN

Codice No.: DE68-03310C

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

Quick Look-up Guide

EN

If you want to cook some food



1. Place the food in the oven.
   Select the power level by pressing **Power Level**( ) button once or more times.

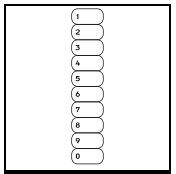

2. Select the cooking time by Pressing the **Number** buttons as required(Max : 30 min).

3. Press **Start**(+30s) button
   Result: Cooking starts. The oven beeps four times when cooking is over.

If you want to Defrost some food



1. Place the frozen food in the oven.
   Press the **Defrost**( ) button.

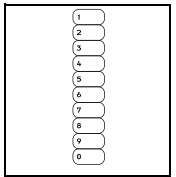

2. Press the **Number** button to set the Defrosting time(Max:30min).

3. Press **Start**(+30s) button
   Result: Defrost starts. The oven beeps four times when cooking is over.
4.

If you want to adjust the cooking time

Leave the food in the oven.
Press **+30s** once or more times for each extra 30 seconds that you wish to add.

Oven & Display

Oven

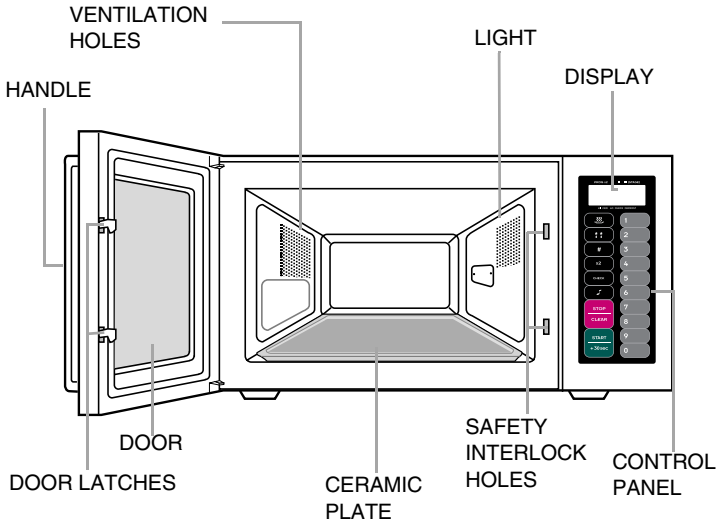

Display

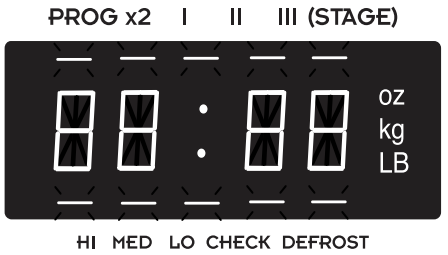

배태현taehyun.baeMWO개발 (조립기술)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 3 Wednesday, July 9, 2008 11:37 AM

Control Panel

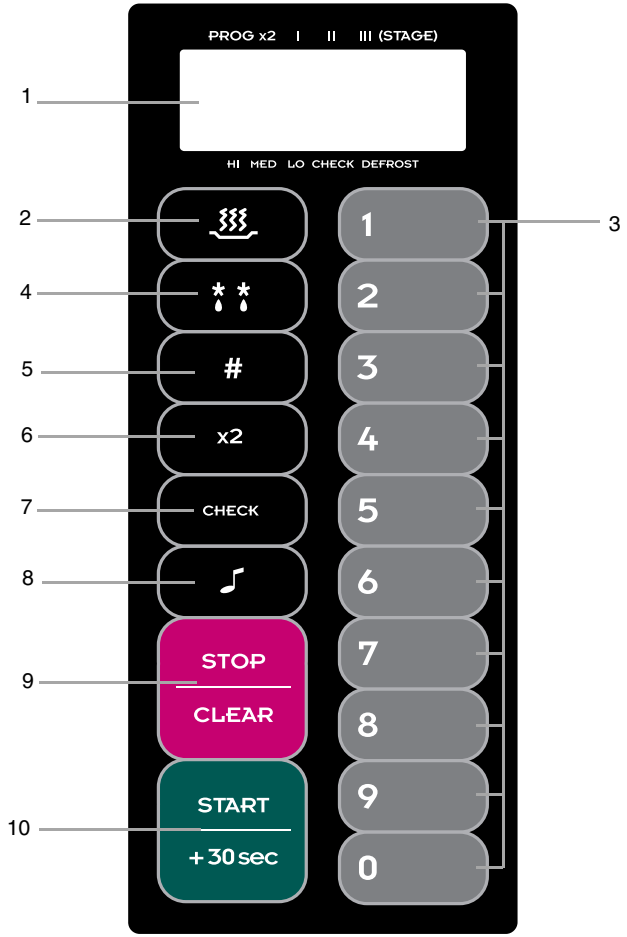

1. DISPLAY
2. POWER LEVEL BUTTON
3. NUMBER BUTTONS
4. DEFROST BUTTON
5. PROGRAM BUTTON
6. DOUBLE QUANTITY
7. CHECK BUTTON
8. SOUND BUTTON
9. STOP/CLEAR BUTTON
10. START BUTTON

Using this Instruction Booklet

EN

You have just purchased a Bonn microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- ***Safety precautions***
- ***Suitable accessories and cookware***
- ***Useful cooking tips***

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

The step-by-step reocedures use two different symbols.

Important **Note**

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
(1) Door (bent)
(2) Door hinges (broken or loose)
(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 4 Wednesday, July 9, 2008 11:37 AM

EN

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

WARNING:
If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:
It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING:
Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:
Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation **ALWAYS** allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize.
Stir during heating, if necessary, and **ALWAYS** stir after heating.
In the event of scalding, follow these **FIRST AID** instructions:

* Immerse the scalded area in cold water for at least 10 minutes.
* Cover with a clean, dry dressing.
* Do not apply any creams, oils or lotions.

WARNING:
The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

- Only use utensils that are suitable for use in microwave ovens;
  DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags.

Reason: Electric arcing or sparking may occur and may damage the oven.

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
  Do not use your microwave oven to dry papers or clothes.
- Small amounts of food require shorter cooking or heating time.
  If normal times are allowed they may overheat and burn.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.

- **NEVER** heat a babys bottle with the teat on, as the bottle may explode if overheated.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
  Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance should not be cleaned with a water jet.
- **DO NOT** cover the ventilation slots with cloths or paper. They may catch fire as hot air is evacuated from the oven.
  The oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.
- **ALWAYS** use oven gloves when removing a dish from the oven to avoid unintentional burn.
- Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
  Do not operate this appliance if it has a damaged power cable or plug.
- Stand at arms length from the oven when opening the door.

Reason: The hot air or steam released may cause scalding.

- You may notice a Clicking sound during operation(especially when the oven is defrosting).

Reason: This sound is normal when the electrical power output is changing.

- **DO NOT** operate the microwave oven when it is empty. the power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes.
  It is best to leave a glass of water inside the oven at all times.The water will absorb the microwaves energy if the oven accidently started.

IMPORTANT

- Young children or infirm persons should NEVER be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

Please contact your local authorities in regard to the enviromentally safe disposal of this product.

배태현taehyun.baeMWO개발 그룹(조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 5 Wednesday, July 9, 2008 11:37 AM

Installing Your Microwave Oven

☛ For your personal safety, this appliance must be:
- Properly earthed (3-pin plug)
- Plugged into a standard 240 Volt, 50 Hz, AC earthed socket

1. Install the oven on a flat, level, stable surface. Make sure there is adequate ventilation for your oven by leaving at least 10cm(four inches) of space behind, on the sides of the oven and 20cm(eight inches) of above.

2. Never block the air vents as the oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.

3. Remove all packing materials inside the oven.

4. Plug the cable into a 3-pin, earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable as supplied from service center.

Recommendations

✉ DO NOT install the microwave oven in hot or damp surroundings.

Example: Next to a traditional oven or radiator.

✉ The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven.

✉ Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

What to Do if You are in Doubt or Have a Problem

EN

Before you call a service engineer your oven, check this list of possible problems and solutions.

◆ Neither the oven's display nor the oven operate.
- Properly insert the plug into a grounded outlet.
- If the outlet is controlled by a wall switch, make sure the wall switch is turned on.
- Remove the plug from the outlet, wait ten seconds, then plug it in again.
- Reset the circuit breaker or replace any blown fuse.
- Plug another appliance into the outlet; if the other appliance doesn't work, have a qualified electrician repair the outlet.
- Plug the oven into a different outlet.

◆ The oven's display works, but the power doesn't come on.
- Make sure the door is closed securely.
- Check to see if packing material or other material is stuck to the door seal.
- Check for door damage.
- Press Cancel twice and re-enter all cooking instructions.

◆ The power goes off before the set time has elapsed.
- If there has not been a power outage, remove the plug from the outlet, wait ten seconds, then plug it in again. Reset the cooking instructions.
- Reset the circuit breaker or replace any blown fuse.

◆ You see sparks or arcing.
- Remove any metallic utensils, cookware, or metal ties. If using foil, use only narrow strips and allow at least one inch between the foil and interior oven walls.

◆ Using your microwave causes TV or radio interference.
- This is similar to the interference caused by other small appliances, such as hair dryers. Move your microwave further away from other appliances, like your TV or radio.

◆ Door opening starts automatic operation of FAN

✉ When placing or removing food items, as soon as the Door is opened the Lamp and Fan will start automatically. The automatic starting of the Fan is intentional, so no service call is required. The fan will automatically stop upon closing the door.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

EN

Setting Cooking Times & Power Levels

One-Stage Cooking

You can stop cooking at any time to check the food.



1. Press the **Power Level**( ) button to select power.
   By pressing the **Power Level**( ) button repeatedly, you can select the power level - HI, MED, or LO.

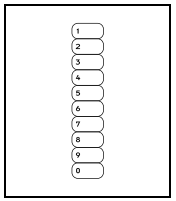

2. Use the **Number** buttons to enter the cooking time. You can set a time from one second to 30 minutes.
   To set a time over one minute, enter the second as well.
   - For example, to set 10 minutes, enter **1, 0, 0, 0**.

3. Press **Start**(+30s) button to begin cooking.

✉ The maxium allowable cooking time is 30 min. If the time exceed 30 min, the display will show “E3”, then press **Stop/Clear**( ) button and repeat the steps.

Power Level	Percentage	Output
HI	100 %	1100 W
MED	70 %	770 W
LO	50 %	550 W
DEFROST	30 %	330 W

Setting Cooking Times & Power Levels (continued)

Multi-Stage Cooking

You can stop cooking at any time to check the food.



1. Press the **Power Level**( ) button to select power.
   By pressing the **Power Level**( ) button repeatedly, you can select the power level - HI, MED, or LO.

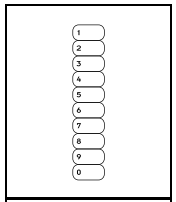

2. Use the **Number** buttons to enter the cooking time. You can set a time from one second to 30 minutes.
   To set a time over one minute, enter the second as well.
   - For example, to set 10 minutes, enter **1, 0, 0, 0**.



3. Repeat steps 1 and 2 for II or III stage cooking.

4. Press **Start**(+30s) button to begin cooking.

✉ The maxium allowable cooking time is 30 min. If the time exceed 30 min, the display will show “E3”, then press **Stop/Clear**( ) button and repeat the steps.

배태현taehyun.baeMWO개발 (조립기술)*********197 20080709113758

Using the Defrost button



1. Press the **Defrost**(⁂) button..



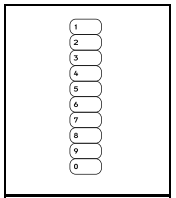

2. Press the **Number** buttons to set the defrosting time. You can set a time from one second to 30 minutes.



3. Press the **Start**(◇ +30s) button

✉ The maximim allowable cooking time is 30 min. If the time exceed 30 min, the display will show “E3”, then press **Stop/Clear**(▽)button and repeat the programming.

Using the Start(◇ +30s) button

This button offers a convenient way to heat food in 30 sec. increments at the High power level.

EN

1. Press the **Start**(◇ +30s) button once for each 30 sec. you wish to cook the food.
   - For example, press it twice for one minute. The time will display, and the oven starts automatically.

✉ Add 30 seconds to a program in progress by pressing the **Start**(◇ /+30s) button for each 30sec. you want to add.

Using the Stop/Cancel(▽) Button

The Stop/Cancel(▽) button allows you to clear instructions you have entered. It also allows you to pause the oven's cooking cycle, so that you can check the food.



To pause the oven during cooking, press **Stop/Clear**(▽) button once.

To restart, press **Start**(◇ +30s)button.

✉ To correct a mistake you have just entered, press **Stop/Clear**(▽) once, then re-enter the instructions.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 8 Wednesday, July 9, 2008 11:37 AM

Memory Programming

EN

One - Stage Cooking



1. Upon pressing the **Program**(#) button, the oven will enter Program mode.
   The display will be cleared .

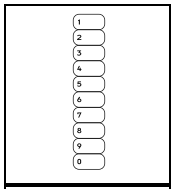

2. Using the **Number** buttons, enter the program number from 1 to 20.

3. Then, press the **Power Level**( ) button to select power.
   By pressing the **Power Level**( ) button repeatedly, you can select the power level - HI, MED, or LO.

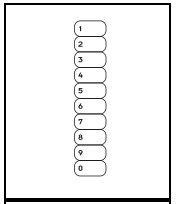

4. Use the **Number** buttons to enter the cooking time. You can set a time from one second to 30 minutes.
   To set a time over one minute, enter the seconds as well.
   - For example, to set 10 minutes, enter **1, 0, 0, 0**.



5. Press the **Program**(#) button to complete setting the memory.
   The display will show ":0".

✉ The maximim allowable cooking time is 30 min. If the time exceed 30 min, the display will show “E3”, then press **Stop/Clear**( )button and repeat the programming.

Multi - Stage Cooking



1. Upon pressing the **Program**(#) button, the oven will enter Program mode.
   The display will be cleared.

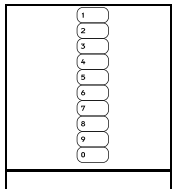

2. Using the **Number** buttons, enter the program number from 1 to 20.



3. Then, press the **Power Level**( ) button to select power.
   By pressing the **Power Level**( ) button repeatedly, you can select the power level - HI, MED, or LO.



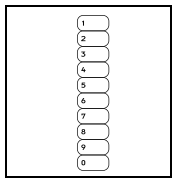

4. Use the **Number** buttons to enter the cooking time. You can set a time from one second to 30 minutes.
   To set a time over one minute, enter the seconds as well.
   - For example, to set 10 minutes, enter **1,0,0,0**.

5. Repeat steps 3 and 4 for II or III stage memory programming.



6. Press the **Program**(#) button to complete setting the memory.
   The display will show “:0”.

✉ The maximim allowable cooking time is 30 min. The sum of programmed time must not exceed 30 min. If the time exceed 30 min, the display will show “E3”, then press **Stop/Clear**( )button and repeat the programming.

Using Memory Programming

Press the **Number** buttons to select user-programmed memory functions (please refer to Memory Programming) from 1 to 20. The oven will start instantly without pressing the **Start**(+30s) button.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 9 Wednesday, July 9, 2008 11:37 AM

Using the Check button

EN

Confirming the cooking time and Power Level in each Memory Program



1. Clear all operations by pressing the **Stop/Clear**( ) button. Press the **Check** button to enter Check mode.



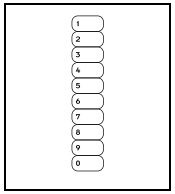

2. By using **Number** buttons, enter the Memory Program number from 1 to 20.
   - For example, suppose you press **5**( ), for Memory Program 5 which is **HI** power Level, **I Stage** cooking with a time of 6 minutes and 30 seconds, 6:30.
   - First, 5 will be displayed, but will change to show the Memory Program settings.

3. After one second, the display will clear automatically. If you want to check other Memory Programs, just enter the Memory Program numbers.



4. Press the **Stop/Clear**( ) botton to exit the Check mode.

Reading each Memory Program's Cycle Counter



1. Clear all operations by pressing the **Stop/Clear**( ) button. Press the **Check** button to enter Check mode.



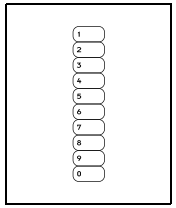

2. Press the **Start**(+30s) button, and then press any **Number** button, from 1 to 20, and the number of cycles for that particular Memory Program will be displayed. The cycle count is displayed in units of 10.
   - For example, if Memory Program 5 has been used 100 times, the display will show "10".

   ☛ As the display uses units of 10, the cycle counts are approximate. The cycle count displayed increases every ten cycles.

   ☛ For example, if the cycle count were 90-99, "9" would be displayed, The "9" would change to "10" on the 100th cycle. The cycle counter function has a limit of 99,990 cycles. Once that number is exceeded, the cycle counter will automatically clear and start again from "0".

3. After one second, the display will clear automatically. If you want to check the cycle count of other Memory Programs, just enter the Memory Program numbers.



4. Press the **Stop/Clear**( ) button to exit the Checking mode.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

EN

Resetting the Memory Program Cycle Counter



1. Clear all operations by pressing the **Stop/Clear**( ) button.
   The display will show " : 0 ".







2. Hold down **Number 0**( ) and then press **Defrost**( ) button.
   The Microwave will emit a Beep sound confirming the reset operation.
   The display will show " : 0 ".



Setting the Sound



1. Press the **Sound** button to adjust sound volume. The basic sound volume is "LO" and when you press the **Sound** button repeatedly, the sound volume changes in the following order - MED, HI, OFF, LO one by one.

2. Press the **Start**(+30s) button to exit Sound mode.
   The display will show ":0".



Indicator	Sound
HI	Loud
MED	Middle
LO	Low
Blank	Off

Using the Double Quantity button



1. Press the **Double Quantity**( ) button.



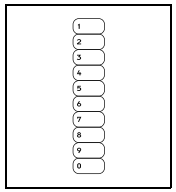

2. By using the **Number** buttons, enter the Memory Program number from 1 to 20.
   - For example, suppose you press **5**( ) button, for Memory Program 5 which is HI Power Level, I Stage cooking with a time of 6 minutes and 30 seconds, 6:30.

3. The Memory Program then operates for double the user-programmed time, which in this case makes 13 minutes.

(6:30 x 2 = 13:00)

The maximum allowable cooking time is 30 min. If doubling the programmed time exceeds the maximum allowable cooking time, the display will show "E3", then press **Stop/Cancel**( ) button.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 11 Wednesday, July 9, 2008 11:37 AM

Cookware Guide

EN

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless deco-rated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		May cause arcing or fire.
• Dishes	✗	
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended
✓✗ : Use Caution
✗ : Unsafe

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 12 Wednesday, July 9, 2008 11:37 AM

EN

Reheating Dish Entrees

Use the power levels and times in this table as a guide lines for reheating

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Plated Meal (chilled)	350 g	Plate a meal of 2-3 chilled components on a ceramic dish. Reheat covered.	MEDIUM	6½-7	3
Chicken Curry & Rice (chilled)	300 g	Plate a meal of 2 chilled components on a ceramic dish (e.g. rice and curry). Reheat covered.	MEDIUM	4½-5½	3
Pasta with sauce (chilled)	350 g	Put pasta (e.g. spaghetti or egg noodles) into a deep ceramic plate. Reheat covered. Stir during reheating.	HIGH	4-5	3
Filled pasta in sauce (chilled)	350 g	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Reheat covered. Stir occasionally during reheating.	MEDIUM	4½-5½	3
Lasagne (chilled)	400 g	Put the chilled lasagne (pre-cooked product) widthways in the centre of table. Reheat covered.	HIGH	4½-5½	3
Bechamel Potatoes (chilled)	400 g	Put bechamel potatoes (pre-cooked product) widthways in the centre of table. Reheat covered.	MEDIUM	5½-6½	3
Baked Potatoes (ready cooked and chilled)	500 g (2x250 g)	Pierce film and put potatoes on a flat ceramic plate.	HIGH	5-6	2-3

Reheating Soup and Stew

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Soup (chilled)	250 g	Pour into a deep ceramic plate. Reheat covered. Stir during reheating.	HIGH	3-3½	2-3
Stew (chilled)	250 g 500 g	Pour into a deep ceramic plate or bowl. Reheat covered. Stir during reheating.	MEDIUM	4-4½ 5½-6	2-3
Bean Stew (canned)	350 g	Pour into a deep ceramic plate or bowl. Reheat covered. Stir during reheating.	MEDIUM	3½-4	2-3
Soup (frozen)	1000 g	Pour into a glass pyrex dish with lid. Reheat covered. Stir during reheating.	HIGH	20-22	2-3

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 13 Wednesday, July 9, 2008 11:37 AM

EN

Reheating Snacks

Use the power levels and times in this table as a guide lines for cooking.

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Cheeseburger (chilled)	150 g (1pc)	Put burger on kitchen paper on a ceramic plate.	HIGH	1-1½	2-3
Cheeseburger (frozen)	150 g (1pc)	Put burger on kitchen paper on a ceramic plate.	LO	3-3½	2-3
Hot Dog (chilled)	125 g (1pc)	Put hot dog on kitchen paper on a ceramic plate.	MEDIUM	ca. 1½	2-3
Pizza; Slice (chilled)	100 g	Put the pizza slice on a kitchen paper on ceramic plate.	LO	1½-2	1-2
Meat & Vegetable Wrap (chilled)	200 g	Put the chilled wrap (filled pastry roll) on kitchen paper on a ceramic plate.	MEDIUM	2-2½	1-2
Quiche/ Pie (chilled)	150 g	Put quiche on kitchen paper on a ceramic plate.	MEDIUM	2-2½	2-3
Croissants	2 pcs (60g)	Put the croissants on kitchen paper on a ceramic plate. Serve croissants directly after warming.	MEDIUM	½-1	-

Cooking Breakfast

Use the power levels and times in this table as a guide lines for cooking.

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Bacon (chilled)	2 slices à 20 g	Put bacon slices on kitchen paper on a flat ceramic plate.	HIGH	ca. 1½	1
Scrambled Eggs	2 eggs	Beat eggs, add salt and 2 tbsp. milk. Put in a deep ceramic plate. Stir several times during cooking.	LO	ca. 2½	1
Baked Beans (canned)	250 g	Put the beans in a deep ceramic plate. Reheat covered. Stir during reheating.	MEDIUM	2½-3½	1-2

Defrosting Bread and Cake

Use the power levels and times in this table as a guide lines for cooking. .

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Baguettes	150 g (1pc)	Put the baguette widthways on kitchen paper in the oven.	DEFROST	ca. ½	3-5
Bread Rolls	4 pcs à 50 g	Put the rolls side by side on kitchen paper in the oven.	DEFROST	ca. 3	3-5
Fruit Cake	120 g (1pc)	Put the piece of cake on a ceramic plate.	DEFROST	3-3½	5-10
Cream Cake Roll	100 g (1pc)	Put the piece of cake on a ceramic plate. Place plate in the centre of table. Let stand until cream is totally defrosted.	DEFROST	ca. 1	10-20

Defrosting and Cooking Desserts

Use the power levels and times in this table as a guide lines for cooking.

Food	Portion	Method	Power	Time (min)	Standing Time(min)
Berries in sauce	250 g	Put frozen fruits in a glass pyrex bowl with lid. Reheat covered. Stir once during standing time.	MEDIUM	6-6½	2-3
Yeast Dumplings with jam filling	300 g (2pcs)	Put frozen yeast dumplings (pre-cooked) side by side in a glass pyrex bowl with lid. Moist the top of them with cold water. Cook covered.	MEDIUM	4½-5	2-3

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 14 Wednesday, July 9, 2008 11:37 AM

EN

Cleaning Your Microwave Oven

The following parts of your microwave oven should be cleaned regularly to pre-vent grease and food particles from building up:

- ***Inside and outside surfaces***
- ***Door and door seals***

☛ **ALWAYS** ensure that the door seals are clean and the door closes properly.

☛ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces with a soapy cloth.
3. To loosen hardened food particles and remove smells, place a jug of water and lemon juice on the ceramic plate and heat for ten minutes at maximum power.
4. Do not clean this product using water.

✉ **DO NOT** spill water in the vents. NEVER use any abrasive products or chemical solvents.

✉ Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

✉ **Clean the** microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury .

Storing and Repairing Your Microwave Oven

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- ***Broken hinge***
- ***Deteriorated seals***
- ***Distorted or bent oven casing***

Only a qualified microwave service technician should repair this oven.

☛ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

✉ If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason: Dust and damp may adversely affect the working parts in the oven.

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1021T-gb.fm Page 14 Thursday, December 6, 2001 12:45 PM

Technical Specifications

Bonn strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	**CM-1041T**
Power source	240V ~ 50 Hz
Power consumption	
Microwave	1450 W, 6.5 A
Output power	1100 W (IEC-705) (4 power levels including defrost)
Operating frequency	2450 MHz
Cooling method	Cooling fan motor
Dimensions (W x H x D)	
Outside	517 x 297 x 412 mm
Oven cavity	336 x 225 x 349 mm
Volume	26 liter
Weight	
Net	17.5 kg
Gross	19.0 kg

Warranty

This Bonn Commercial Microwave Oven is supplied with a 12 month from the date of purchase.
This warranty covers the cost of parts for 12 months from the date of purchase. It also covers the cost of labour for the first 12 months from date of purchase. The conditions of this warranty are subject to the terms and conditions set out below.
Any service claimed under warranty must be done with full proof of purchaseincluding serial number.
Failure to do so will incur service costs to the purchaser.

Terms and Conditions

1. PURCHASER'S STATUTORY RIGHT

The warranty terms set out below do not exclude any conditions or warranties which may be mandatory implied by law, and your attention is drawn to the provisions of the Trade Practices Act 1974 and State Legislation which confers certain rights on consumers.

2. WARRANTY

(A) 12 MONTH PARTS AND 12 MONTH LABOUR WARRANTY

Bonn Appliances warrants to the original purchaser of this commercial mirowave oven that for a period of 12 months from date of purchase, any component found by Bonn Appliances to be defective will be replaced by Bonn Appliances without charge for parts. For a period of 12 months from the date of purchase, such componants will be replaced without charge for labour. This warranty is given on the condition that all service is to be performed by Bonn Appliances or by a service agent authorised by Bonn Appliances to service commercial microwave oven.

If the oven is installed within a reasonable distance from an authorised service agent Bonn Appliances will, at it's cost, effect warranty service on-site. Bonn Appliances shall have the exclusive right to determine what is a reasonable distance in each case. If the oven is installed out side of this area the customer shall bear the cost of sending the product to the agent or the agent's travelling cost to the purchaser's premises.

CM1021T-gb.fm Page 15 Thursday, December 6, 2001 12:45 PM

Terms and Conditions (continued)

(B) EXCLUSIONS

The warranty set forth in paragraph 2(A) should not apply:

(i) To any defect or failure which, upon inspection by Bonn Appliances or it's authorised service agent, is attributable to accident, misuse, abuse, negligence, alteration, non-observance of operating instructions or local regulations, improper installation, inadequate or faulty power supply, damage during transit and/or delivery, fire, flood, riot or any act of God, normal wear and tear, in particular to but not restricted to Stirrer Covers, Ceramic Bases, Lamps, Door Assemblies and Cavities.

(ii) If the equipment has been serviced by a person not authorised by Bonn Appliances or with parts not approved by Bonn Appliances.

(iii) If Serial Number plate is removed or defaced.

(iv) To any costs related to operator instructions, correction of program errors, interior or exterior finishes attributable to a manufacturing fault, routine maintenance or cleaning.

(v) To loose accessories.

(vi) If the equipment is repossessed under any financing agreement.

(vii) If the equipment is used outside Australia without the prior written approval of Bonn Appliances.

3. All claims under this warranty should be directed to Bonn Appliances on Ph. 07-3390 4185 Australia wide.

4. Subject to the purchaser's statutory rights referred to in Clause 1, Bonn Appliances reserves the right to charge for any service not covered by the company warranty.

Important

- Read the operating manual before operating your microwave oven. Familiarize your staff with oven operation before placing in service.
- Should you require service under warranty, please consult the instruction book before you call for service as service call for non-equipment failure or instruction on use may result in a service labour charge for your account.

Contact

For additional information and details of your nearest service agent authorized by Bonn Appliances contact:

Bonn Appliances
4/40 Rivergate Place.
Murarrie, 4172 Australia
Ph. 07-3390 4185
Fax. 07-3393 9508

CM1041T_XSA-03310C_EN.fm Page 18 Wednesday, July 9, 2008 11:37 AM

Note

배태현taehyun.baeMWO개발 (조리거리)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 18 Wednesday, July 9, 2008 11:37 AM

Note

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 18 Wednesday, July 9, 2008 11:37 AM

Note

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758

CM1041T_XSA-03310C_EN.fm Page 20 Wednesday, July 9, 2008 11:37 AM

Bonn

COMMERCIAL MICROWAVE OVEN

배태현taehyun.baeMWO개발 (조리기기)*********197 20080709113758